Your New Tumble Dryer

This tumble dryer will give your wash that soft, relaxed feel whatever the weather.
It is fitted with a condensation system. The moisture extracted from the wash is condensed and then collected in a water tank.

Extremely high quality standards both during development and manufacturing guarantee a long service life for your appliance.

Maximum economy in the operation of your dryer is achieved through very frugal electricity consumption and short drying times.

Energy saving tips

To save energy we recommend that you follow these hints:

- Try to load the maximum capacity of the machine as small loads are **uneconomical**.
- Always load well spun laundry. The higher the spin speed, the lower the electricity consumption and the shorter the drying times.

  Clothes which are dripping wet should not be placed in the dryer.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Clean the filter and the condenser regularly to avoid excessive drying times and high electricity consumption.
- Ventilate the room well. The room temperature should not exceed +35°C during drying.

In the interest of the environment

- Materials marked with the symbol ♺ are recyclable.
- Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance.
- When the appliance is to be scrapped, cut off the power supply cable and make the door closing device unusable to prevent young children from being trapped inside.
- Help to keep your country tidy - use authorised disposal sites for your old appliance.

How do we help to protect the environment? We use recycled paper!

Important Safety Information

It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings.

These warnings have been provided in the interest of safety. You MUST read them carefully before installing or using the appliance.

Istallation

- This appliance is heavy. Care should be taken when moving it.
- It is dangerous to alter the specifications or attempt to modify this product in any way.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Care must be taken to ensure that the appliance does not stand on the electrical supply cable.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely.
- If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory).

Child Safety

- This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the product.
- Pets and children have been known to climb into tumble dryers. Please check your drum before use.
- Keep all packaging well away for children.

Use

- Do not overload appliance (see programme chart).
- As some bulky items such as duvets and eiderdowns should be dried in large commercial machines because of their bulk, check with the manufacturer of the item if it is suitable for drying in a domestic machine, even if the dry weight of the item is within the limit advised.
- Please make sure that no gas lighters have accidentally been left in pockets of garments to be loaded into appliance.
- **Danger of explosion**: Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substance are volatile, they could cause an explosion. Tumble dry only items washed with water.
- In order to avoid danger of fires caused by excessive drying, do not use appliance to dry the following items:
- Cushions, quilts and the like (these items accumulate heat).
- Items containing rubber foam or materials similar to rubber foam.
- Leave the door slightly ajar when the appliance is not being used. This will allow the seal to be preserved.
- Clean fluff filter after using tumble dryer. To prevent fire risks, do not use the appliance if the fluff filter is non placed properly or damaged.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Tricity Bendix Service Centre. Always insist on genuine Tricity Bendix spare parts.

Contents

For the User

Your New Tumble Dryer 2

Important Safety Information 3

- Installation 3
- Child Safety 3
- Use 3

Description of the Appliance 5

The Control Panel

- Door opening 6
- Control lights 6
- Drying time selector dial 6

Programme Chart 7

Operating Sequence

- Load the laundry 8
- Select drying time 8
- End of cycle 8

Drying Hints

- Sort and prepare laundry before drying 9
- Never tumble dry the following 9
- Starched fabrics 9
- Shrinking 9
- What is fluff? 9
- Time and energy consumption 9
- How much does dry laundry weigh? 9

Maintenance and Cleaning

- Cleaning fluff filter 10
- Emptying water container 10
- Cleaning tumble dryer 10
- Cleaning inside part of drum 10
- Cleaning condenser 10

Something Not Working

Service and Spare Parts 11

Tricity Bendix Guarantee Conditions 11

Tricity Bendix Service Centres 13-14

For the Installer

Installation Instructions 15

Technical Specifications 15

- Positioning 16
- Important information regarding installation 16
- Stacking kit (optional accessory) 16
- Electrical connections 17

Guide to use the Instruction Book

The following symbols will be found in the text to guide you throughout the instructions:

⚠ **Safety instructions**

i **Hints and tips**

Environmental information

Description of the Appliance

1. Top cover
2. Programme chart
3. “Full tank” light
4. Mains-on light
5. Door opening button
6. Drying time selector dial
7. Fluff filter
8. Door catch
9. Rating plate
10. Ventilation grid
11. Condenser unit
12. Water container (tank)
13. Adjustable feet

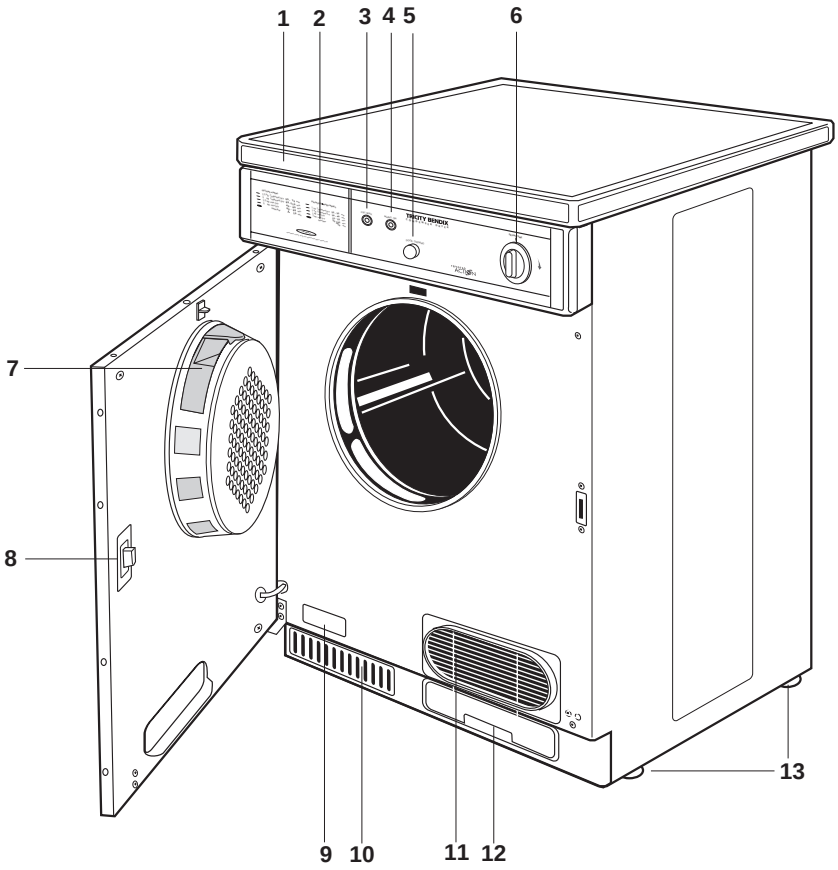

The Control Panel

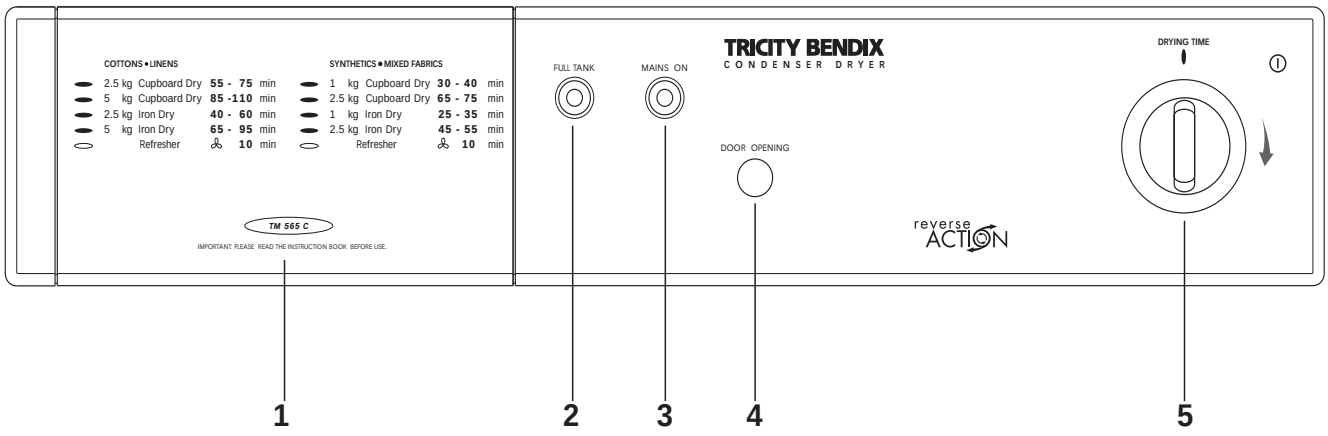
COTTONS • LINENS
2.5 kg Cupboard Dry 55 - 75 min
5 kg Cupboard Dry 85 -110 min
2.5 kg Iron Dry 40 - 60 min
5 kg Iron Dry 65 - 95 min
Refresher 10 min
SYNTHETICS • MIXED FABRICS
1 kg Cupboard Dry 30 - 40 min
2.5 kg Cupboard Dry 65 - 75 min
1 kg Iron Dry 25 - 35 min
2.5 kg Iron Dry 45 - 55 min
Refresher 10 min
TM 565 C
IMPORTANT: PLEASE READ THE INSTRUCTION BOOK BEFORE USE.
FULL TANK
MAINS ON
TRICITY BENDIX
CONDENSER DRYER
DOOR OPENING
reverse ACTION
DRYING TIME
1
2
3
4
5

1 Programme guide

For further information, please refer to programme chart.

2 "Full tank" light

This light lights up when the water container is full or when it has been inserted incorrectly.

The programme will be interrupted.

3 Mains-on light

The mains-on light is alight during the drying cycle. It switches off at the end of selected drying time.

4 Door opening button

To open the door, press this button. Should the door be opened while appliance is working, the tumble dryer will stop functioning.

5 Drying time selector dial

Select the desired drying time by turning the dial clockwise (to the right).
ATTENTION! In order to avoid causing damage to mechanism, do not turn the dial anti-clockwise.

There are two drying programmes to choose from:

- Linen - Cotton - (2400 W), 20 - 120 minutes
- Synthetics - (1800 W), 20 - 80 minutes

Cooling

Drying programmes end with a ten minute cooling phase. This ten minute period is calculated as part of the overall selected drying time. During the cooling phase, the appliance's heating elements are switched off and the laundry is cooled before the tumble dryer stops automatically in position '0' (end of drying cycle). Do not shorten or interrupt the cooling phase. Leaving warm laundry inside the drum will cause creasing and in some cases permanent damage.

Programme Chart

Cotton and linen

Heating element - 2400 W

Type of laundry:	Degree of drying	Amount of laundry in kg	Drying time in minutes for laundry spun at		
			800 rpm	1000 rpm	1200 rpm
Cotton Towelling Shirts Sheets Hand towels Tablecloths Table napkins	Cupboard dry (wardrobe dry)	5	95-110	90-105	85-100
		2.5	65-75	60-70	55-65
	Iron dry (not completely dry; suitable for ironing)	5	80-95	75-90	65-80
		2.5	50-60	45-55	40-50

Synthetics

Heating element - 1800 W

Type of laundry:	Degree of drying	Amount of laundry in kg	Drying time in minutes for laundry spun at a minimum speed of 650 rpm
Synthetics or mixed fabrics which do not require ironing.	Cupboard dry	2.5	65-75
		1	30-40
		0.5	25-30
Synthetics or mixed fabrics requiring ironing	Iron dry	2.5	45-55
		1	25-35
		0.5	20-25

ATTENTION! Please follow the instructions on labels when drying mixed fabrics.

Operating Sequence

Before using your tumble dryer for the first time, we recommend to place a few damp cloths inside the appliance and dry for approximately 20 minutes. There may be dust or dirt inside a brand new tumble dryer.

1. Load the laundry

Open the door by pressing the “door opening” button. Load spun laundry. Do not press laundry in appliance. Close door making sure that there are no laundry items preventing the door from being closed.

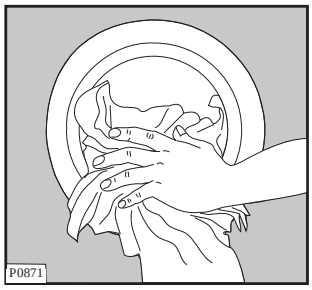

2. Select drying time

Turn the dial **clockwise** until the desired drying time is under the symbol on the front panel. The mains-on light will then light up and the appliance will start functioning.

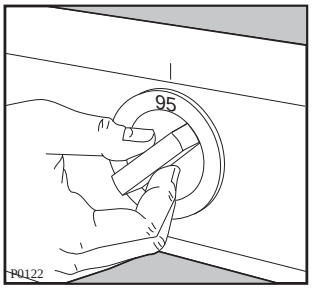

3.End of cycle

When the selected cycle has come to an end, the tumble dryer will stop and the mains-on light will switch off automatically. The selector dial will return to the ‘zero’ position.
Open the door and take out cooled laundry.

IMPORTANT! Clean filter and empty water container after every drying programme.

Drying Hints

Sort and prepare laundry before drying

Sort laundry to be dried according to fabric type (see label on each item) and desired degree of dryness. Close all zips and tie all strings. Close pillowcases and quilt covers to prevent small items from getting tangled inside them.

Never tumble dry the following:

- Particularly delicate items such as synthetic curtains, silk and nylon stockings.
- Items containing rubber foam or materials similar to rubber foam.
- Woollens or mixed-wool garments, as these will shrink and felt.

Do not tumble dry items treated with inflammable liquids (petrol, methylated spirits, dry cleaning fluid) to avoid fire risks.

Starched fabrics

Starched fabrics may also be dried in this appliance. To obtain the best results, select 'iron dry' drying time with residual dampness. When the cycle has been completed, clean tumble dryer drum with a damp cloth and then with a dry cloth in order to remove any remaining starch.

Shrinking

Some items (such as shirts and the like) may easily shrink to a greater or lesser extent. This is due to the fact that these items are 'suspended' inside the tumble dryer, as opposed to being hung on a washing line to dry, which is usually the case.
Do not over-dry these items. Select 'iron dry' drying time for these items.

What is fluff?

When you begin to use your tumble dryer, you will be surprised to see the amount of fluff that accumulates in the fluff filter.
This is perfectly normal and does not mean that the tumble dryer is damaging the laundry being dried.
When the tumble dryer is being used, as well as when items are washed by hand or in a washing machine, fibres and fluff are released by any laundry item and adhere to its surface. This also happens when fabrics are hung out to dry in outdoor environments. In a tumble dryer fibres and fluff accumulate in the fluff filter and increase in volume because of the heat inside the appliance.

Time and energy consumption

Energy consumption and drying times vary according to the quantity, residual dampness after spinning, size and nature of the fabrics being dried and the degree of dryness.
If the appliance is overloaded, mediocre drying results will be obtained and the laundry will be creased.
In order to reduce energy consumption and drying times, it is necessary to spin the laundry adequately.
The use is recommended of a washing machine capable of spinning laundry at a speed of 800 rpm or more.
Garments which are not ironed, such as shirts, must also be spun for 10 - 30 seconds before they are dried in the tumble dryer.

How much does dry laundry weigh?

Please use the following values to load the appliance correctly. These values refer to cotton garments:

	Approximate weight in grammes
Bathrobes	1200
Quilt covers	700
Sheets	500
Handtowels, pillowcases	200
Shirts, night-gowns	200
Pyjamas, blouses	100
Underpants, socks	100
Kitchen towel	100

The labels on the garments indicate exactly which drying method to choose.

DRYING	Flat	On the line	On clothes hanger	Tumble dry	Do not tumble dry

Maintenance and Cleaning

Cleaning fluff filter

Clean fluff filter located on the inside part of the door after every drying programme.
Proceed as follows:

- Pull filter upwards in order to remove it.
  Remove fluff from filter by hand or with a damp cloth.
  Place filter in original position.

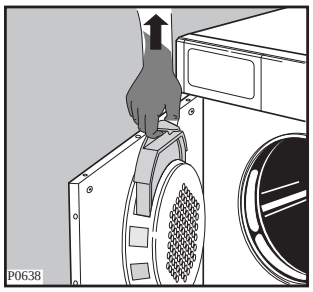

Emptying water container (tank)

Water extracted from the laundry being dried is collected in a special container. This container must be emptied after every cycle, but it can also be emptied during the drying cycle. Should you forget to empty the container, a light will light up on the panel and the drying cycle will stop automatically even if the laundry is not dry yet. **Insert container correctly.**

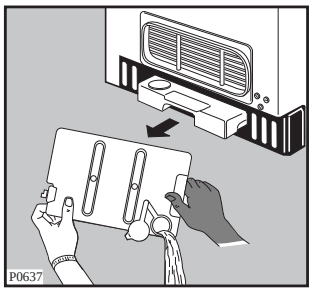

Cleaning tumble dryer

The external part of the appliance, the control panel, the drum, its plastic and rubber surfaces may be cleaned with a damp cloth and neutral washing-up liquid.

Cleaning inside part of drum

Should a film of limescale build up on the drum after a while, remove it with a damp cloth and a limescale remover.
ATTENTION! Do not use solvents or abrasive substances.

Cleaning condenser

Remove fluff from condenser on a regular basis to avoid prolonging drying times and increasing energy consumption.

Proceed as follows:

1. Remove condenser by using the top handle.
2. Clean condenser with a hand-held shower or a soft brush.
3. Clean external part, too.
4. Leave condenser to dry; when it is dry, place in original position.

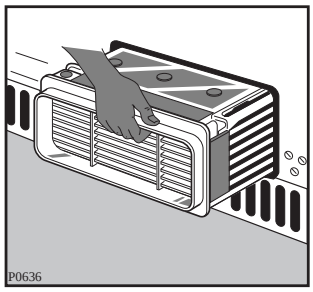

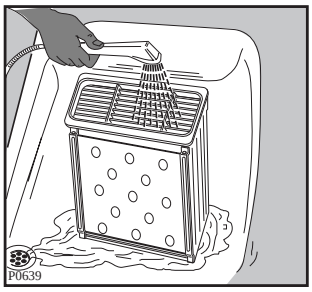

Important! Do not use pointed objects or utensils to clean the spaces between the plates, as this could damage the condenser and make it permeable.
Do not use this appliance if the condenser has not been fitted.

Something Not Working

Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below.

Symptom	Possible causes
The tumble dryer does not start	■ The door has not been closed. ■ The plug is not properly inserted in the power socket. ■ There is no current at the socket ■ The main fuse has blown. ■ The drying time selector dial is incorrectly positioned. ■ The water container is full or not properly inserted.
Drying takes too long or laundry is not dry enough.	■ The laundry has not been spun properly. ■ The filter is clogged up. ■ The condenser needs cleaning. ■ The room temperature is too high. ■ Has the correct drying time been chosen? ■ There is too much laundry inside the appliance. ■ The water container is full.
Space surrounding the appliance is overheating.	■ Room in which appliance has been installed is too small or ventilation is insufficient. Open door/windows or move tumble dryer.

If after all these checks, the problem persists, contact your local Service Centre, quoting the model and serial number. This information can be found on the rating plate located in the lower part of the appliance.

Please note that it will be necessary to provide proof of purchase for any in-guarantee service calls. In-guarantee customers should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

Service and Spare Parts

If you require an engineer or assistance with your appliance, please call our customer care department:

0870 5 929929

⚠ This product should be serviced by an authorised Service engineer, and only genuine spare parts should be used.

⚠ Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.

Tricity Bendix Guarantee Conditions

We, Tricity Bendix, undertake that if within 12 months of the date of the purchase this TRICITY BENDIX appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that:

- The appliance has been installed correctly and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with, by any person not authorised by us.

All service work under this guarantee must be undertaken by a Tricity Bendix service representative or authorised agent.
Any appliance or defective part replaced shall become our property.
This guarantee is in addition to your statutory and other legal rights.
Home visits are made between **8.30 am** and **5.30 pm** Monday to Friday. Visits may be available outside these hours in which case a **charge** will be made.

Exclusions

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic, or vacuum cleaner drive belts, brushes or dust bags.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of Tricity Bendix manufacture which are not marketed by Tricity Bendix Ltd.
- EU Countries. The standard guarantee is applicable but subject to the owner's responsibility and cost to ensure the appliance meets the standards set by the country to which the product is taken.

Proof of purchase may be required. Electrolux Aftersales Service in the country concerned, with whom Tricity Bendix have an arrangement, will be pleased to advise further.

TRICITY BENDIX SERVICE FORCE

To contact your local Tricity Bendix Service Centre telephone 0990 929929

CHANNEL ISLANDS

GUERNSEY	Guernsey Electricity PO Box 4 Vale , Guernsey Channel Islands
JERSEY	Jersey Electricity Company PO Box 45 Queens Road St Helier Jersey Channel Islands JE4 8NY

SCOTLAND

ABERDEEN (M05)	8 Cornhill Arcade Cornhill Drive Aberdeen AB2 5UT
AUCHTERMUCHY (M03)	33A Burnside Auchtermuchy Fife KY14 7AJ
BLANTYRE (M07)	Unit 5 Block 2 Auchenraith Ind Estate Rosendale Way Blantyre G72 0NJ
DUMFRIES (M01)	93 Irish Street Dumfries Scotland DG1 2PQ
DUNOON (M67)	Briar Hill 7 Hill Street, Dunoon Argyll PA23 7AL
GLASGOW (M04)	20 Cunningham Road Clyde Estate Rutherglen, Glasgow, G73 1PP
INVERNESS (M06)	Unit 3B Smithton Indust. Est. Smithton Inverness IV1 AJ
ISLE OF ARRAN (OWN SALES)	Arran Domestics Unit 4 The Douglas Centre Brodick Isle of Arran KA27 8AJ
ISLE OF BARRA (OWN SALES)	J Zerfah 244 Bruernish Isle of Barra Western Islands HS9 5QY
ISLE OF BUTE (M66)	Walker Engineering Glenmhor Upper Serpentine Road Rothesay Isle of Bute PA20 9EH
ISLE OF LEWIS (M69)	ND Macleod 16 James Street Stornoway Isle of Lewis PA87 2QW
KELSO (M08)	2-8 Wood Market Kelso Borders TD5 7AX
ORKNEY (M65)	Corsie Domestics 7 King Street Kirkwall Orkney KW15
SHETLAND (OWN SALES)	Tait Electronic Systems Ltd. Holmsgarth Road Lerwick Shetland ZE1 0PW
SHETLAND (OWN SALES)	Bolts Shetland Ltd 26 North Road Lerwick Shetland ZE1 0PE
WHALSAY (OWN SALES)	Leask Electrical Harlsdale Symbister, Whalsay Shetland ZE2 9AA

NORTHERN IRELAND

BELFAST (M27)	Owenmore House Kilwee Industrial Estate Upper Dunmury Lane Belfast BT17 0HD

WALES

CARDIFF (M28)	Guardian Industrial Estate Clydesmuir Road Tremorfa, Cardiff CF2 2QS
CLYWD (M14)	Unit 6-7 Coed - Parc Abergele Road Rhuddlan Clwyd Wales LL18 5UG
OSWESTRY (M17)	Plas Funnon Warehouse Middleton Road Oswestry SY11 2PP
HAVERFORDWEST (M75)	Cromlech Lodge Amerlston Haverfordwest SA62 5DS
DYFED (M77)	Maes Y Coen High Mead Lianybydder Dyfed SA40 9UL

NORTH EAST

GATESHEAD (M39)	Unit 356a Dukesway Court Dukesway Team Valley Gateshead NE11 0BH
GRIMSBY (M42)	Unit 2 Cromwell Road Grimsby South Humberside DN31 2BN
HULL (M41)	Unit 1 Boulevard Industrial Estate Hull HU3 4AY
LEEDS (M37)	64-66 Cross Gates Road Leeds LS15 7NN
NEWTON AYCLIFFE (M45)	Unit 16 Gurney Way Aycliffe Ind Estate Newton Aycliffe DL5 6UJ
SHEFFIELD (M38)	Pennine House Roman Ridge Ind. Roman Ridge Road Sheffield S9 1GB

NORTH WEST

BIRKENHEAD (M11)	1 Kelvin Park Dock Road Birkenhead L41 1LT
CARLISLE (M10)	Unit 8 South John Street Carlisle CA2 5AJ
ISLE OF MAN (M64)	South Quay Ind Estate Douglas Isle of Man
LIVERPOOL (M15)	Unit 1 Honeys Green Precinct Honeys Green Lane Liverpool L12 9JH
MANCHESTER (M09)	Unit 30, Oakhill Trading Estate Devonshire Road Worsley Manchester M28 3PT
PRESTON (M13)	Unit 250 Dawson Place Walton Summit Bamber Bridge Preston Lancashire PR5 8AL
STOCKPORT (M16)	Unit 20 Haigh Park Haigh Avenue Stockport SK4 1QR

ELECTROLUX SERVICE FORCE

To contact your local Electrolux Service Centre telephone 0990 929929

MIDLANDS

BIRMINGHAM (M18)	66 Birch Road East, Wyrley Road Industrial Estate Witton Birmingham B6 7DB
BOURNE (M44)	Manning Road Ind Estate Pinfold Road Bourne PE10 9HT
BRIDGNORTH (M72)	1 Underhill Street Bridgnorth Salop WV16 4BB
GLOUCESTER (M23)	101 Rycroft Street Gloucester GL1 4NB
HEREFORD (M31)	Unit 3 Bank Buildings Cattle Market Hereford HE4 9HX
HIGHAM FERRERS (M51)	30 High Street Higham Ferrers Northants NN10 8BB
ILKESTON (M43)	Unit 2 Furnace Road Ilkeston DE7 5EP
LEICESTER (M22)	Unit 7 Oaks Industrial Estate Coventry Road Narborough Leicestershire LE0 5GF
LINCOLN (M40)	Unit 8 Stonefield Park Clifton Street Lincoln LN5 8AA
NEWCASTLE UNDER LYME (M12)	18-21 Croft Road Brampton Industrial Estate Newcastle under Lyme Staffordshire ST5 0TW
NUNEATON (M21)	19 Ptarmigan Place Townsend Drive Nuneaton CV11 6RX
REDDITCH (M20)	13 Thornhill Road North Moons Moat Redditch Worcestershire B98 9ND
TAMWORTH (M19)	Unit 3 Sterling Park Claymore Tamworth B77 5DO
WORCESTER (M73)	Unit 1 Northbrook Close Gregorys Mill Ind Estate Worcester WR3 8BP

LONDON & EAST ANGLIA

CHELMSFORD (M47)	Hanbury Road Widford Ind Estate Chelmsford Essex CM12 3AE
COLINDALE (M53)	Unit 14 Capital park Capital Way Colindale London NW9 0EQ
ENFIELD (M49)	284 Alma Road Enfield London EN3 7BB
GRAVESEND (M57)	Unit B4, Imperial Business Estate Gravesend Kent DA11 0DL
HARPENDEN (M46)	Unit 4 Riverside Estate Coldharbour Lane Harpenden AL5 4UN
LETCHWORTH (M50)	16-17 Woodside Ind Est. Works Road Letchworth Herts SG6 1LA
LONDON (M76)	2/4 Royal Lane Yiewsley West Dravton Middlesex UB7 8DL
MAIDENHEAD (M60)	Reform Road Maidenhead Berkshire SL6 8BY
MOLESEY (M61)	10 Island Farm Avenue West Molesey Surrey KT8 2UZ
NEWBURY (M24)	PO Box 5627 Newbury Berkshire RG14 5GF
IPSWICH (M48)	Unit 2B Elton Park Business Centre Hadleigh Road Ipswich IP2 0DD
NORWICH (M52)	2b Trafalgar Street Norwich NR1 3HN
SUNBURY (M63)	Unit 1a The Summit Hanworth Road Hanworth Ind Estate Sunbury on Thames TW16 5D
SYDENHAM (M62)	Unit 6 Metro Centre Kangley Bridge Road Sydenham SE26

SOUTH EAST

ASHFORD (M58)	Unit 2 Bridge Road Business Estate Bridge Road Ashford Kent TN2 1BB
FLEET (M59)	Unit 1 Redfields Industrial Estate Church Crookham Fleet Hampshire GU13 0RD
HAYWARDS HEATH (M55)	21-25 Bridge Road Haywards Heath Sussex RH16 1UA
TONBRIDGE (M56)	Unit 30 Deacon Trading Estate Morley Road Tonbridge Kent TN9 1RA

SOUTH WEST

BARNSTAPLE (M30)	P.O. Box 12 Barnstaple North Devon EX31 2YB
BOURNEMOUTH (M26)	63-65 Curzon Road Bournemouth Dorset BH1 4PW
BRIDGEWATER (M35)	6 Hamp Industrial Estate Bridgewater Somerset TA6 3NT
BRISTOL (M25)	11 Eldon Way Eldonwall Trading Bristol Avon BS4 3QQ
EMSWORTH (M33)	266 Main Road Southboure Emsworth PO10 8JL
ISLE OF WIGHT (M34)	Unit 8 Enterprise Court Ryde Business Park Ryde Isle of Wight PO33 1DB
NEWTON ABBOT (M29)	Unit 2 Zealley Industrial Estate Kingsteignton Newton Abbot S. Devon TQ12 3TD
PLYMOUTH (M32))	16 Faraday Mill Cattledown Plymouth PL4 0ST
REDRUTH (M36)	Unit 7D Pool Industrial Estate Wilson Way, Redruth, Cornwall TR15 3QW

Installation Instructions

⚠ It is dangerous to alter the specifications or attempt to modify this product in any way.

⚠ Care must be taken to ensure that the appliance does not stand on the electrical supply cable.

⚠ Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

Technical Specifications

DIMENSIONS	Height Width Depth Depth with door open	85 cm (33.5”) 60 cm (23.6”) 60 cm (23.6”) 1200 cm (47.2”)
POWER SUPPLY VOLTAGE TOTAL POWER ABSORBED		230-240 V/50 Hz 2650 W (13A)
MAXIMUM RECOMMENDED LOAD	Cotton, linen Synthetics, delicates	5 kg (11 lbs) 2.5 kg (5 lbs)
DRUM VOLUME		108 l

CE This appliance complies with the following E.E.C. Directives:
- 73/23 EEC of 19.2.73 (Low Voltage Directive) and subsequent modifications;
- 89/336 EEC of 3.5.89 (Electromagnetic Compatibility Directive) and subsequent modifications.

Positioning

Install the appliance on a flat floor or on a washing machine. In any case, the appliance must be perfectly horizontal. Check this by using a spirit level and make any necessary adjustments to appliance's adjustable feet.
Please make sure that there is adequate ventilation underneath the appliance and adequate air change between the grid and base.
In consideration of the above, it is not advisable to place the appliance on a carpet.

Important information regarding installation

- Hot air emitted by the appliance may reach temperatures of up to 60°C. Therefore, do not place appliance on floors which are not resistant to high temperatures.
- Make sure that the temperature of the room in which the appliance is installed does not exceed 35°C. Excessive room temperature will prolong drying times and cause energy consumption to increase.
- Please keep space surrounding tumble dryer as clean as possible.
- Do not remove the appliance's adjustable feet. It is essential to provide a certain amount of space between the floor and the appliance for ventilation purposes. Blocking ventilation would inevitably cause the appliance's inside temperature to increase and would therefore affect the appliance's efficiency.

Stacking Kit (optional accessory)

This tumble dryer may be stacked on a front-loading washing machine. However, the tumble dryer will have to be fixed to the washing machine. For this to be carried out, the special stacking kit (available from all Tricity Bendix Authorised Dealers) will be required.

Electrical connections

WARNING: THIS APPLIANCE MUST BE EARTHED.
The manufacturer declines any liability should this safety measure not be observed.

If the plug that is fitted to your appliance is not suitable for your socket outlet, it must be cut off and the appropriate plug fitted.

Remove the fuse from the cut off plug.

The cut off plug should then be disposed of to prevent the hazard of shocks in case it should be plugged into a 13 Amp socket in another part of your home.

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow - Earth

Blue - Neutral

Brown - Live

If you fit your own plug, the colours of the wires in the mains lead of your appliance may not correspond with the markings identifying the terminals in your plug, proceed as follows:

Connect the green and yellow (earth) wire to the terminal in the plug which is marked with the letter «E» or the earth symbol ⏚ or coloured green and yellow.

Connect the blue (neutral) wire to the terminal in the plug which is marked with the letter «N» or coloured black.

Connect the brown (live) wire to the terminal in the plug which is marked with the letter «L» or coloured red.

The plug moulded on to the lead incorporates a fuse. For replacement, use a 13 Amp BS1362 fuse. only ASTA or BSI approved fuses should be used.

The plug must not be used if the fuse cover/carrier is lost. The cover/carrier is indicated by the coloured insert at the base of the plug.

A replacement cover/carrier must be obtained from your local Tricity Bendix Service Centre.

There is a list of these in this instruction book.

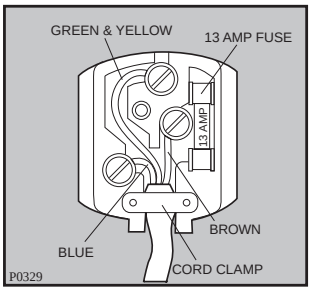

TRICITY BENDIX
Tricity Bendix, 99 Oakley Road, Luton, Beds LU49QQ

Consumer care telephone number 0990-929929

TRICITY BENDIX

OPERATING & INSTALLATION INSTRUCTIONS

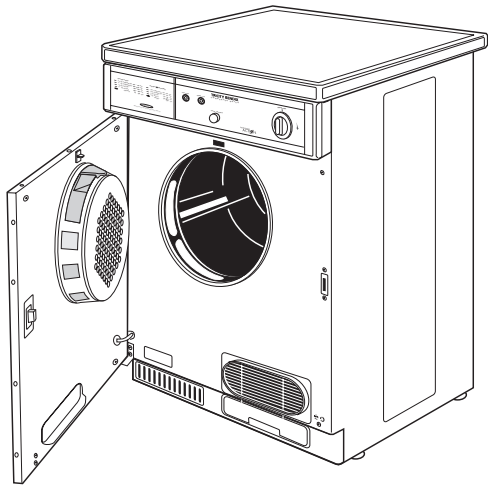

TUMBLE DRYER

TM 565 C

125996871